


9RX Installation Instructions

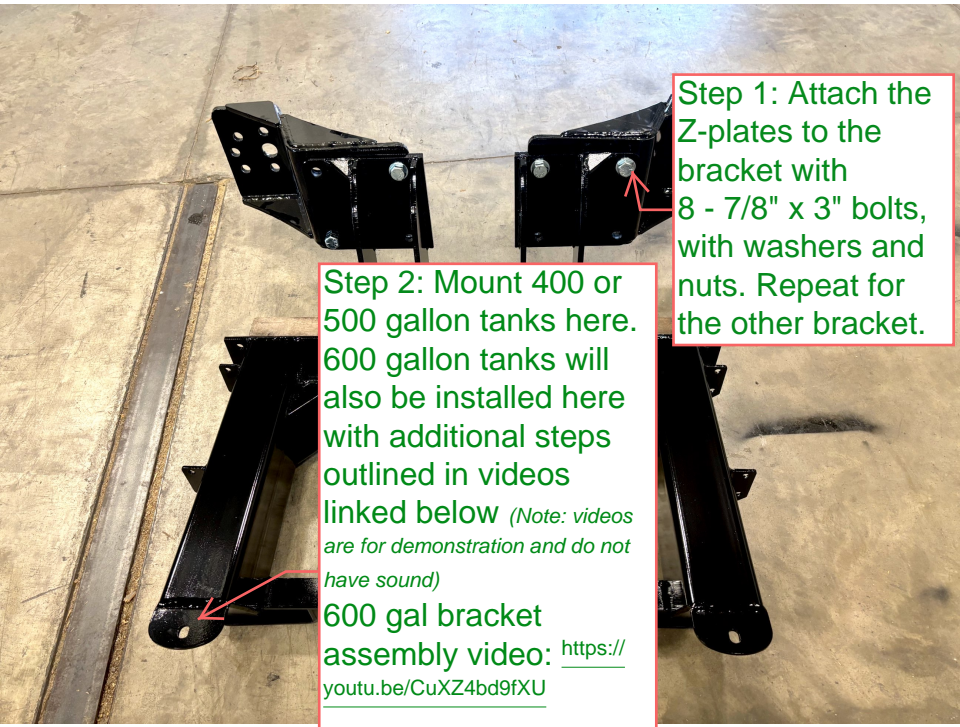

Step 1: Attach the Z-plates to the bracket with 8 - 7/8" x 3" bolts, with washers and nuts. Repeat for the other bracket.

Step 2: Mount 400 or 500 gallon tanks here. 600 gallon tanks will also be installed here with additional steps outlined in videos linked below *(Note: videos are for demonstration and do not have sound)*

600 gal bracket assembly video: <https://youtu.be/CuXZ4bd9fXU>

600 gal tank installation video: <https://youtu.be/t4pqyYiT-Y0>



Leave the bolt in tractor frame which matches this larger hole.

Step 3: Attach this to outside of track frame (see picture below). Use 20mm by 90m bolts to mount this to frame.

